

# Preventing Skipped Stitches · Thread Breakage

## ORGAN® NEEDLES INFORMATION

**SK** Series








### SK series enable stable loop formation under severe sewing conditions

#### **SK Series**

Skipped stitches and thread breakage may occur by missed thread pick up which unstable loop formation can cause.

The deep scarf and the special shaped area around the eye of SK series guarantee stable loop formation and beautiful seams.



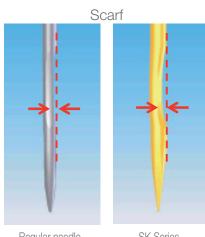

Regular needle

Regular needle


SK Series


#### SK1 Series \*patented needle

This series is effective in preventing skipped stitches of thick materials including car seat, denim, etc.

The key feature enables easy looper adjustment without any processing of needle plate compared to other needles with crank geometry.

Needle with crank geometry

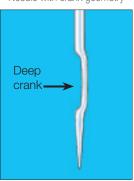

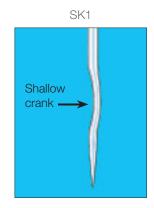

#### **SK2 Series**


This series with a deep scarf enables consistent seam appearance under severe conditions.

FLX118-SK2 is effective in preventing missed thread pick up using high-elastic threads including woolly thread.

Missed thread pick up using woolly thread



Seams using SK2

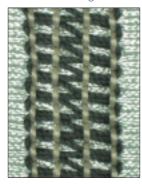

#### **SK1 Series**

SYSTEM	14	16	18	19	20	21	22	23	24	NORMAL SYSTEM
DPX17-SK1	•	•	•			•				DPX17
DPX134-SK1	•	•					•	•		DPX5, DPX134
DPX35R-SK1	•	•	•		•		•	•		DPX35R
UYX128GAS-SK1		•	•		•	•				UYX128GAS

#### **SK2 Series**

SYSTEM	8	9	10	11	12	NORMAL SYSTEM
FLX118-SK2	•	•	•	•		FLX118GCS
TVX5-SK2					•	TVX5



### **ORGAN NEEDLE** CO., LTD.

1 Maeyama, Ueda-shi, Nagano-ken 386-1436, Japan TEL: +81-268-38-3363, FAX: +81-268-38-3590

http://www.organ-needles.com/ E-mail: sales-dpt@organ-ndl.co.jp



